



Blue Ox - Ready Brake Sling Adaptor Installation Instructions




Blue Ox -Ready Brake
Sling Adaptor
#1001

If you have a Blue Ox tow bar and are using our Ready Brake this adaptor is a must have item.

Blue Ox tow bars have a stow pin that makes our sling cable for the Ready Brake hang up when turning. This Adaptor lifts the cable above their pin.

Slip the adaptor over the Blue Ox ½" dia. pin, then use an allen wrench to tighten down the set screw on the side of the adaptor. Next, thread the Ready Brake black sling cable through the hole. Make sure that the adjustable end of the sling cable is attached to the front of the tow car. Now readjust the sling cable to the specifications in the Ready Brake instructions.

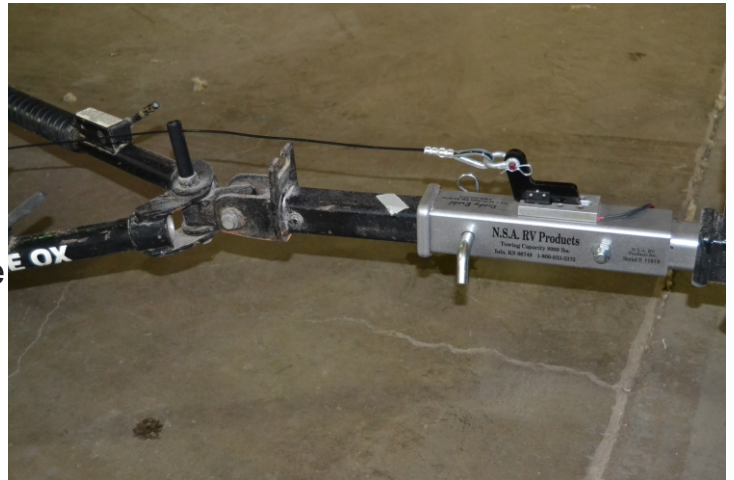

NSA RV Products Inc.
445 W. Lincoln
Iola, KS 66749
620-365-7714
sales@nsarvproducts.com